



CI/SfB

(43)

Yq



MAY 2025
(SUPERCEDES MARCH 2021)
PRODUCT DATA SHEET

ARDEX AF 148

Pressure Sensitive Contract Adhesive

Features

- Extended 3 hour working time
- Ideal for use in large projects
- High grab and exceptional final strength
- Suitable for installation of vinyl sheets, vinyl tiles, and LVT
- Covers up to 52m²
- Can be used with underfloor heating systems

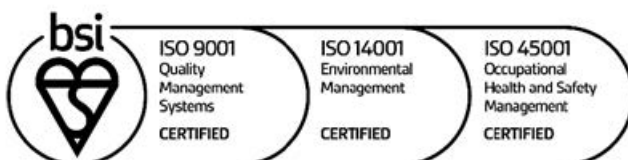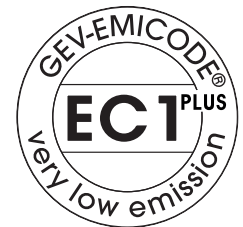

Reg No. FM 01207

EMS 565427

OHS 628374

ARDEX UK LIMITED

Homefield Road, Haverhill, Suffolk CB9 8QP UK.

Telephone: +44 (0)1440 714939

Fax: +44 (0)1440 716640

Email: info@ardex.co.uk

ARDEX online: www.ardex.co.uk

ARDEX AF 148

Pressure Sensitive Contract Adhesive

DESCRIPTION

ARDEX AF 148 is a water-based, solvent free, low odour, pressure sensitive acrylic emulsion-based floorcovering adhesive, with an extended working time of 3 hours.

ARDEX AF 148 offers excellent application properties and produces a high bond strength with permanent high tack. It is protected from biodegradation and has excellent resistance to plasticiser migration.

ARDEX AF 148 meets the requirement guidelines for the EMICODE license 'EC1 PLUS', achieving the lowest possible emission limits.

USE

ARDEX AF 148 is ideal for installing all types of vinyl floorcoverings, and can be used with all ARDEX Latex and Water-Based Levelling and Smoothing Compounds in both commercial and domestic locations.

PRIMING

Priming is not required, however, on highly absorbent surfaces it can be advantageous to prime with ARDEX P 51 Priming and Bonding Agent diluted 1:3 with cold, clean water. This will maintain the working time and ensure maximum coverage of the adhesive.

SUBSTRATE PREPARATION

The subfloor must contain an effective damp proof membrane and be dry, with an equilibrium relative humidity of 75% or below. Where an effective damp proof membrane is absent, or the relative humidity of the subfloor is above 75% RH, consult the ARDEX Moisture Control brochure or contact ARDEX Technical Support Team or the correct product selection.

The subfloor must be hard, clean, free from barrier materials, sound and smooth in accordance with the relevant clauses of BS 8203 and BS 8204. Any dust should be removed using suitable vacuum equipment, prior to applying ARDEX AF 148, as it can affect both the coverage and performance of the adhesive.

Uneven subfloors should be levelled with the appropriate ARDEX Latex or Water-Based Levelling and Smoothing Compound.

ARDEX ARDURAPID A 45 Rapid Drying and Hardening Internal Repair Mortar can be used for repairs to the subfloor/stairs etc., up to 50mm thick, in accordance with the product data sheet.

Joints, nail holes and imperfections in plywood, or minor surface damage to existing levelling and smoothing compounds i.e. footprints or trowel marks, may be pre-smoothed and levelled prior to the application of ARDEX AF 148, using ARDEX FEATHER FINISH in accordance with the product data sheet. Fabricated underlays such as flooring grade plywood, (SP101) should be installed where required over existing timber bases. Wood-based fabricated underlays should be suitable for the floorcovering and be at the equilibrium moisture content they will have in service at the time they are covered.

MIXING

ARDEX AF 148 is ready for use, for optimum performance the adhesive should be thoroughly mixed to ensure the even dispersion of polymers before application.

APPLICATION

The installation area and subfloor should be kept at the recommended temperature as specified by the floorcovering manufacturer and the relevant clauses of BS 8203. These temperatures need to be maintained 48 hours prior to installation, during installation, and 48 hours after installation.

ARDEX AF 148 should be applied evenly to the suitably prepared substrate using the appropriate serrated trowel, held approximately at a 60 degree angle to the subfloor, to maximise coverage and avoid forming pools of adhesive.

Depending on the type of installation, the following advice should be observed.

ARDEX AF 148 should be applied to the subfloor and left to dry to a full tack, at least 30-45 minutes, depending on subfloor absorbency and ambient conditions.

For optimum performance, place the floorcovering into the adhesive within 180 minutes, taking care to ensure correct alignment. Roll the floorcovering using a 68kg roller and/or use a smoothing tool. Roll from side to side first, then end to end, to ensure full overall contact with the adhesive. Remove any air pockets with a cork board or rubbing tool before rolling. Where there is a delay between applying the adhesive and the installation of the floorcovering, any contamination, e.g. by other trades, must be prevented from affecting the applied ARDEX AF 148.

When applying adhesive onto the substrate, ensure that any adhesive which is surplus to requirements, and has been moved across the subfloor, is not placed back into the container. It should be placed into an alternative container for safe, easy disposal. This will avoid possible contamination issues.

UNDERFLOOR HEATING

Underfloor heating systems should be commissioned in accordance with the heating manufacturer's instructions; if comment cannot be found then the guidance given in BS 8203 and BS 8204 should be followed.

Thermal cycling of the subfloor will require raising the temperature of the substrate slowly, usually 5°C a day, to full operating temperature, held for a defined period, and slowly brought back down, usually 5°C a day, so that any shrinkage that is likely to take place occurs before the floorcovering is installed.

If moisture tests are required to verify the relative humidity of the substrate, the underfloor heating system should be switched off for 48 hours prior to testing.

If moisture testing is not required, or after the tests are completed, the heating system should be stabilised to room temperature, but not below 15°C, before installing the floorcovering. The floorcovering should be allowed to acclimatise to the substrate temperature.

After installation allow at least 48 hours of constant temperature for the adhesive to properly cure, before slowly increasing the temperature up to the normal operating temperature of the area.

Do not subject the floor to static or dynamic loads, loaded trolleys, etc., or move fixtures, furniture, etc., onto the flooring until the adhesive has fully set, typically 48 hours at 20°C.

HIGH TEMPERATURE

ARDEX AF 148 is suitable for use over underfloor heating systems and is classified as high temperature resistant. The surface floor temperature must not exceed 30°C. Consult the floorcovering manufacturer for detailed guidance. For areas subjected to prolonged or extreme solar gain, such as southerly facing aspects, consider the use of ARDEX AF 2575 PLUS Heavy Duty Adhesive.

ARDEX AF 148

Pressure Sensitive Contract Adhesive

CLEANING

Remove spills or seepage through joints with a cloth moistened with water before the adhesive dries. Aggressive cleaning agents should only be used with the permission of the floorcovering manufacturer.

PACKAGING

ARDEX AF 148 is packed in plastic tubs 10kg net weight.

COVERAGE

See table below.

The actual coverage achieved in practice is affected by application technique, as well as the texture and absorbency of the subfloor.

STORAGE

ARDEX AF 148 must be stored in unopened packaging, clear of the ground in cool dry conditions and be protected from excessive draught. If stored correctly, as detailed above, the shelf life of this product is 12 months from the date shown on the packaging.

PRECAUTIONS

ARDEX AF 148 is non-hazardous in normal usage, however, good hygiene practices should be followed. Avoid contact with skin; wash off with soap and water before drying takes place.

In case of contact with eyes, rinse carefully and thoroughly with water and seek medical advice. In case of ingestion seek medical assistance. Consult the relevant Health & Safety Data Sheets for further information.

For the latest technical or health and safety information on this product, consult the current product or health and safety data sheet online at: www.ardex.co.uk

WORDING AND TERMINOLOGY

Airing Time

The time the adhesive must be left open before applying the floorcovering. Between 30-45 minutes*.

Working Time

The time in which the adhesive can receive the floorcovering. Up to 180 minutes.

Open Time

The combination of airing and working time. Up to 225 minutes .


*depending on the absorbency of the subfloor and ambient conditions.

The guidance from the floorcovering manufacturer should always be followed if different from the information contained in this Technical Data Sheet.

NOTE: The information supplied in our literature or given by our employees is based upon extensive experience and, together with that supplied by our agents or distributors, is given in good faith in order to help you. Our Company policy is one of continuous Research and Development; we therefore reserve the right to update this information at any time without prior notice. We also guarantee the consistent high quality of our products; however, as we have no control over site conditions or the execution of the work, we accept no liability for any loss or damage which may arise as a result thereof.

Country specific recommendations, depending on local standards, codes of practice, building regulations or industry guidelines, may affect specific installation recommendations.

TECHNICAL ADVICE HELPLINE
01440 714939
ARDEX online: www.ardex.co.uk

Flooring Type	Trowel Size	Coverage
Vinyl Sheet/LVT/ CV	A1 	Up to 52m ²